




## INSTALLING THE RIDE TIME *FlashR* TOUR PAK TURN SIGNAL ADAPTER FOR 2006 AND LATER TOUR PAKS

1. Turn the ignition to off .

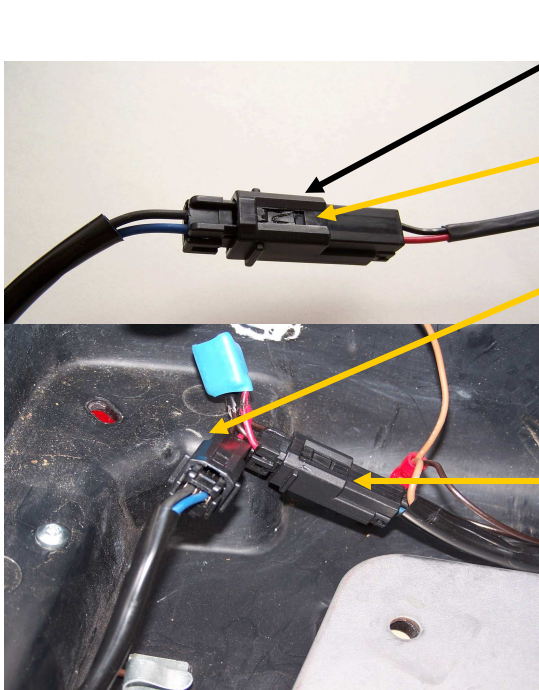


2. Locate the connector that comes from the Tour Pak side marker lights.

3. Depress the tab in the center of the plug housing and pull apart the two halves of the connector

4. Inset the plug from the side marker light into the socket from the Ride Time Technology turn signal adapter. Press the two halves of the connector together until the locking tab clicks into place

5. Insert the plug from the Ride Time Technology turn signal adapter into the socket of the tour pak wiring harness. Push the two halves together until the tab clicks into place

6. The long wire from the Ride Time Turn Signal Adapter module is for the directional light circuit. Since Harley did not bring directional light wiring into the tour pak, you will have to run the directional light wire from a convenient connection point. A good place to make the connection is the wiring harness under the seat just before it enters the rear fender. The brown wire in the harness is usually the right side directional light. A violet wire is usually the left turn directional light. **Be sure to make your connections before any turn signal or tail light controllers or load equalizers.**

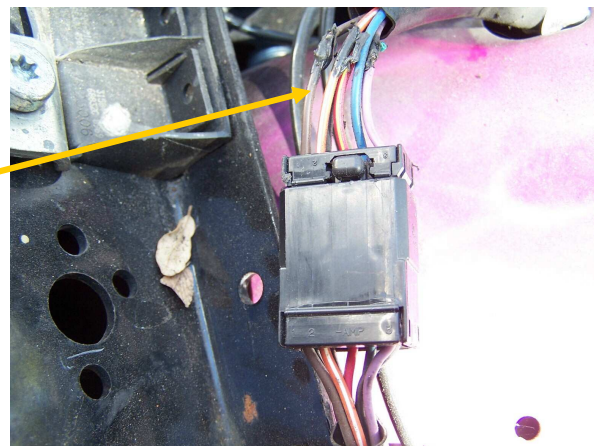

7. Test your installation.
8. For ease of installation, consider the RTQC-2 and RTQC Quick Connect cables and adapters