




INSTALLING THE RIDE TIME TECHNOLOGY SUPER FENDER TIP BOARD

Remove the fender tip light lens by inserting a flat blade screwdriver into the slot at the top of the lens. Press down on the screwdriver and twist. Unplug and remove the old incandescent bulb.


Remove the tail light lens by removing the two screws. Pull the lens away from the fender. Behind the lens you will find the rear fender power distribution connector.

The rear fender tip light is plugged into the upper left corner of the connector board. Remove the plug by depressing the locking tab on the upper side of the plug

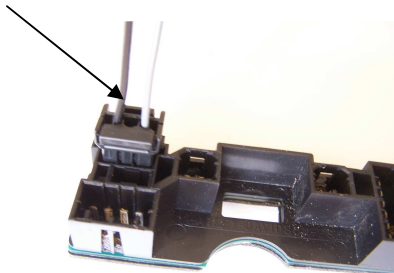


Push the wire and plug through the hole in the fender that is just below the left edge of the distribution board. Bend out the metal clips that hold the wire to the bottom of the rear fender. Remove the fender tip light fixture by removing the two torx head screws that penetrate the fender.

Once removed from the fender, drill out the two rivets that hold the white rubber stock bulb holder. You may also clip the bulb holder off with a pair of snips or bend the bracket until the bulb holder breaks free

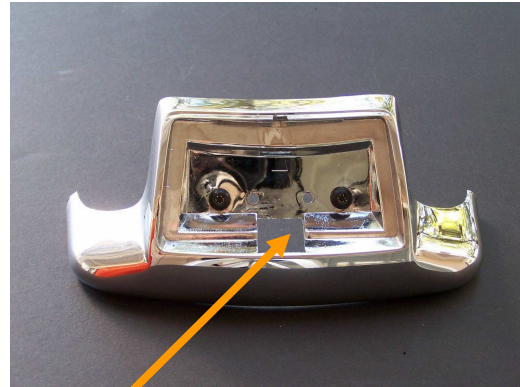

Remove bulb holder then thorough clean the light fixture with warm soap and water.

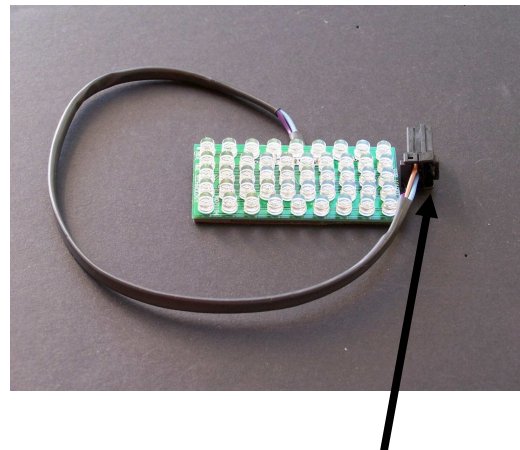

Push the plug from the Super Fender Tip Light Board through the hole in the bottom of the light fixture then through the hole in the fender behind the light fixture.

Insert the mounting screws through the two metal tabs. Reattach the fender tip light housing to the fender.




Bend the mounting tabs up then over the mounting screw. Be careful, use gloves, the metal tab has sharp edges.



Carefully remove the backing from the adhesive strips on the back of the Super Fender Tip Light Board. Position the board in the center of the light fixture and press the LED board to the fixture.

Push the plug through the hole in fender that is at the bottom left of the distribution board. Insert the plug into the fender tip light socket (upper left of the distribution board). Insert the cable into metal cable clamps on the underside of the rear fender. Bend the metal straps toward the fender to secure the cable.

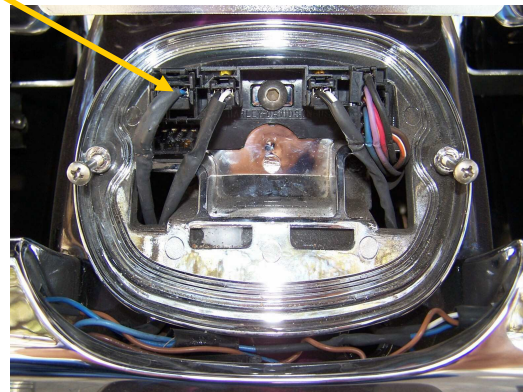

Reattach the fender tip lens.

Reattach the tail light lens.

*Ride Time Technology
P.O. Box 4706
Horseshoe Bay, Texas 78657
www.ridetimetechology.com*